



# **Network Indoor Station**

**Installation Guide**

## Symbol Conventions

The symbols that may be found in this document are defined as follows.

| Symbol   | Description   |
|--|---|
|  <b>Danger</b>  | Indicates a hazardous situation which, if not avoided, will or could result in death or serious injury.   |
|  <b>Caution</b> | Indicates a potentially hazardous situation which, if not avoided, could result in equipment damage, data loss, performance degradation, or unexpected results. |
|  <b>Note</b>    | Provides additional information to emphasize or supplement important points of the main text.   |

# Contents

|  |   |
|--|---|
| 1 About this Manual .....                    | 1 |
| 2 Appearance .....                           | 2 |
| 3 Typical Application .....                  | 4 |
| 4 Wiring Description .....                   | 5 |
| 5 Installation .....                         | 6 |
| 5.1 Installation Accessory Description ..... | 6 |
| 5.2 Wall Mounting .....                      | 6 |

# 1 About this Manual

Get the manual and related software from or the official website (<http://www.hikvision.com>).

| Product                | Model                        |
|------------------------|------------------------------|
| Network Indoor Station | DS-KH8350-WTE1,DS-KH8350-TE1 |

Scan the QR code to get the configuration guide for detailed information.



Scan the QR code to get the operation guide for detailed information.



## 2 Appearance

### Front Panel

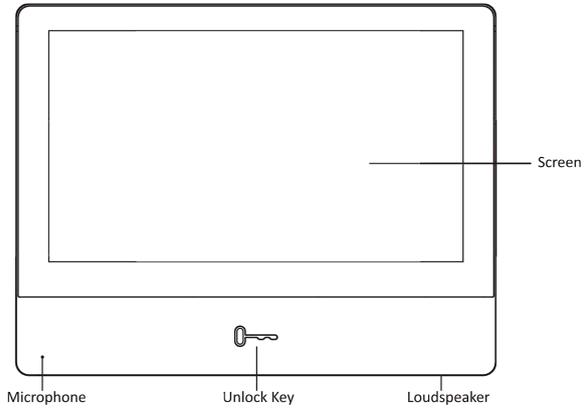


Figure 2-1 Front Panel

### Rear Panel


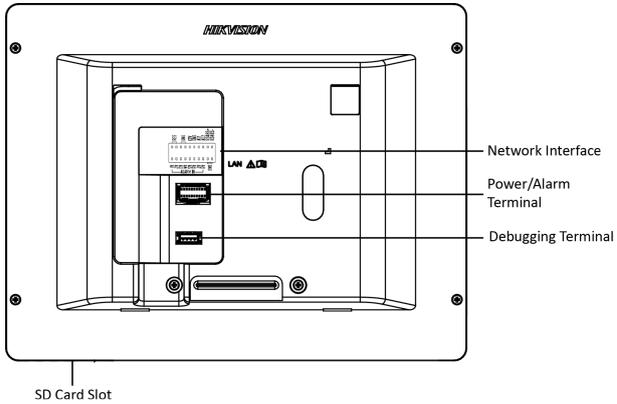


Figure 2-2 Rear Panel

 **Note**


- The Unlock key is valid only when does the indoor station speak with the door station or open the live view of the door station.
  - You can not use the debugging terminal.
-

# 3 Typical Application

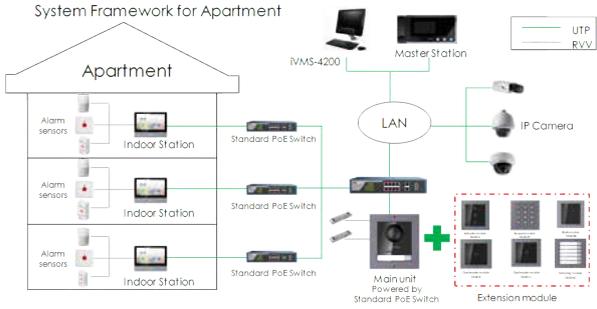

## 4 Wiring Description

There are 20 pins in the terminal on the rear panel of the indoor station: 2 RS-485 pins, 2 power pins, 2 GND pins, 2 alarm output pins, 8 alarm input pins, and 4 reserved pins.

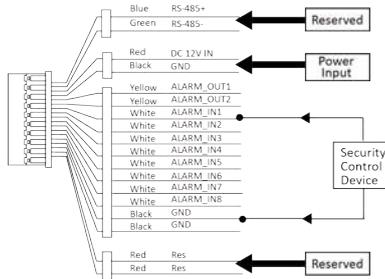

**Figure 4-1 Wiring Description (Alarm Input Device)**

## 5 Installation

It supports wall mounting. There are two installation modes.

### 5.1 Installation Accessory Description

The wall mounting plate is required when installing the indoor station on the wall. The dimension of wall mounting plate is shown below.

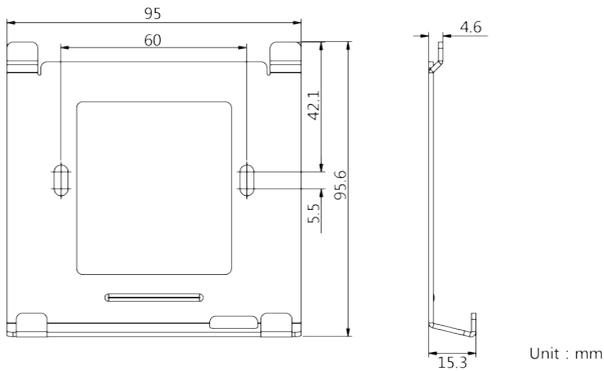


Figure 5-1 Wall Mounting Plate

### 5.2 Wall Mounting


#### Before You Start

- Make sure the device in the package is in good condition and all the assembly parts are included.
- The power supply the indoor station supports is 12 VDC. Please make sure your power supply matches your indoor station.
- Make sure all related equipments are power-off during the installation.
- Check the product specification for the installation environment.

#### Steps

1. Fix the wall mounting plate to the wall with 2 supplied screws.

- Put the indoor station on the holder of the wall mounting plate.

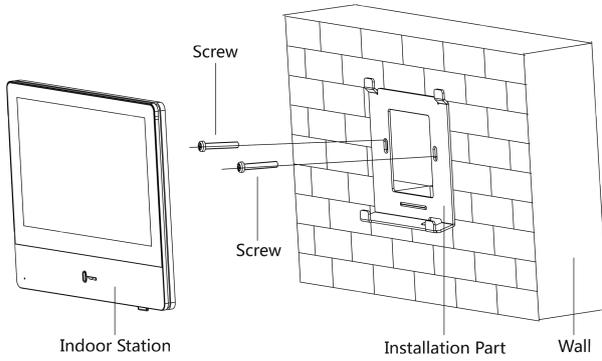

**Figure 5-2 Installing the Plate**

